





GUITAR, AMPLIFIER, CASE COMBINATION

HOW TO ORDER PARTS: WHERE TO PLACE ORDER:

Replacement parts may be ordered through any Sears, Roebuck and Co. U.S.A., or in Canada, Simpsons-Sears Limited Retail or Mail Order Store. Prices available upon application.

LOCATION OF CHASSIS AND MODEL NUMBERS:

The chassis number will be found on a metal plate attached to the chassis.

The model number will be found on the control panel.

ORDER MUST STATE:

1. The Part Number

The Part Description


The Chassis Number 3. 4. The Model Number

1449

1457

USED IN

MODELS

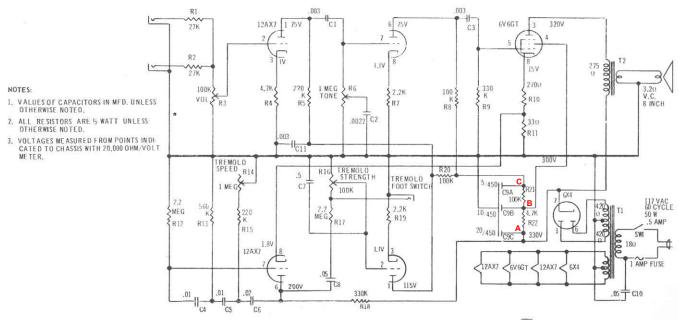

SCHEMATIC DIAGRAM OF SILVERTONE CHASSIS 185.11090


CHASSIS PARTS						CABINET PARTS	
Schematic	Part		Schematic	Part		Part	
Location	No.	Description	Location	No.	Description	No.	Description
CAPACITORS			RESISTORS			1449C	Case for
C1, C3, C11	, C3, C11 20-0036 .003 mfd., 600 v.			(All resistors ½ watt unless otherwise noted)			1449
C2	20-220	.0022 mfd., 600 v.	R1,R2	18-27302	27K ohm, 20%	1457C	Case for
C4,C5	20-016	.01 mfd., 600 v.	R3,R16	22-10412	100K ohm control,		1457
C6	20-026	.02 mfd., 600 v.			linear	7835	Handle
C7	20-502	.5 mfd., 200 v.	R4,R22	18-47202		7023	with
C8,C10	20-056	.05 mfd., 600 v.	R5,R15		220K ohm, 20%		hardware
C9A-C9B-C9C 25-51020 Electrolytic,5-10-20 mfd.,			R6	22-10512	1 megohm control,	53N	Hinge
		450 v.			audio taper		
\$0°			R7,R19		2.2K ohm, 20%	3011N	Catch
			R8,R20,R21			273	Lid
MISCELLANE OUS PARTS			R9,R18	18-33402			support
T1	P-7	Power Transformer	R10	18-27151		8M32	Speaker,
T2	091	Output Transformer	R11	18-33002	33 ohm, 20%	OWIDE	8 inch.
SW1	2019	Toggle Switch SPST	R12,R17	18-22502			3.2 ohm
	83130Bl	PR - 항공 : (2016년 1일 - 1925년) : (1) - (2)	R13	18-56402			V.C.
	FS49	Single Foot Switch	R14	22-10513	1 megohm control, linear	1457M-V2 Owner's	
							Manual

- SEARS' TECHNICIAN ONLY -

Refer to the Div. 57 Authorized Price List 185.00 for current selling prices, availability and ordering information.

Remove and destroy the corresponding page from the Div. 57 Standard Nomenclature Radio Technical Manual and file this revised page in its place.

SF57-

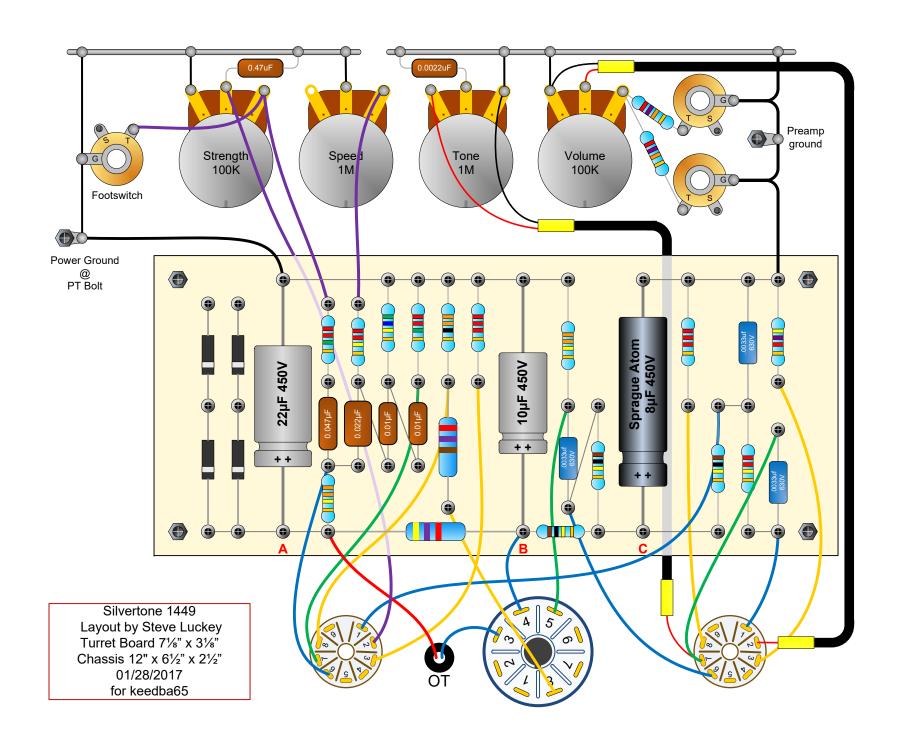

DRILL/JUMPER GUIDE

INSTRUCTIONS FOR PRINTING DRILL GUIDE

(Turret --- drill size is 3/32"

Standoff – drill size to fit

Hole for wire pass thru – drill size to fit

Dashed lines are underboard jumpers

Board size is 3-1/8" X 7-1/8". Print 2 copies of this drill guide <u>FULL SIZE</u> on letter sized paper. Use one template as a drill guide. The other template will be used for installing jumpers. Measure the board length of the printout to verify it is 7-1/8". Attach to blank board using double sided carpet tape or spray adhesive. Use a center punch to put a mark at the cross hairs of each turret, standoff, and hole. Use a 3/32" drill bit to drill <u>all</u> holes. Then enlarge holes as needed for standoff screws and wire pass thru. Remove paper template from board and clean board thoroughly using mineral spirits and denatured alcohol. Load turrets.

